# Micro Motion<sup>™</sup> Series 3000 Transmitters with MVD<sup>™</sup> Technology



- Platform architecture designed for flexibility
  - Transmitter and/or controller in field-, rack-, or panel-mount design
  - Wide range of I/O channels for maximum functionality
- Broadest range of application coverage
  - Advanced density options enable measurement of concentration, petroleum, net volume, water cut, and associated net oil/ water flow
  - Provides powerful and easy one-stage or two-stage batch control with ticket printing output
  - Delivers effective security capabilities suitable for custody transfer applications
- Single operator interface for easy setup, control, and operation
  - Full configuration capabilities eliminate the need for external tools
  - Large display provides easy-to-read menus and descriptive alarms
  - Enables Smart Meter Verification for quick, complete meter diagnosis without process interruption

### 

A.P.O. - ELMOS v.o.s., Pražská 90, 509 01 Nová Paka, Tel.: +420 493 504 261, E-mail: apo@apoelmos.cz, Internet: www.apoelmos.cz



# Micro Motion Series 3000 transmitters

Series 3000 transmitters electronics combine transmitter functions and PLC capabilities in one instrument. Series 3000 models feature MVD technology, enabling high-speed digital signal processing (DSP) capabilities and a broad range of specialty applications.

#### MVD technology makes your meter work smarter

- Front end signal processing gives faster response time and dramatically reduces signal noise
- Provides reduced wiring costs through use of standard 4-wire instrument cable
- On-board signal processing results in the cleanest, most accurate signal delivered, even with tough measurement conditions such as entrained gas

#### Smart Meter Verification: advanced diagnostics for your entire system

- A comprehensive test that can be run locally or from the control room to provide confidence in your meter functionality and performance
- Verifies that your meter performs as well as the day it was installed, giving you assurance in less than 90 seconds
- A basic version of Smart Meter Verification is included with new enhanced core processors that provides simple pass/fail results, and simple diagnostics that run without interrupting your processes
- A licensed version includes enhanced capabilities, such as viewing previous results and generating comprehensive reports

#### Mounting and Installation flexibility to fit your exact needs

- Form factors include rugged field mounts with a full suite of hazardous area approvals or DIN rail packages for cost effective control room cabinets
- Local user interfaces provide detailed operator feedback and accessibility
- Connection to new or existing Micro Motion sensors easily achieved through flexible configurations

#### **Control and Application Tailored Software**

- 3500 and 3700 transmitters measure and control based on direct input from a Micro Motion Coriolis meter
- 3300 and 3350 models control based on a frequency input from a remote transmitter
- Specialty application software available such as batch control, petroleum measurement, net oil measurement, and custody transfer security

# Applications

Application are custom designed programs and software available to offer additional functionality and performance to transmitters. These applications are available through options in the transmitter model code, see the ordering information section for details.

#### Process monitor / totalizer

Process monitoring and totalizing for multiple variables, including mass flow, volume flow, density, and temperature, reported in the user's choice of unit. Unit options include all common units, plus °API, SCF, beer barrels, etc., and the ability to define a special unit for mass, volume, or gas standard volume.

#### Smart Meter Verification (SMV)

Provides a quick, complete assessment of a Coriolis meter, determining whether the meter has been affected by erosion, corrosion, or other influences affecting meter calibration.

- No secondary references are required to perform this operation, and the meter can continue normal process measurement while the test is in progress.
- A basic version of Smart Meter Verification is included with new enhanced core processors that provides simple pass/fail results, and simple diagnostics that run without interrupting your processes.

#### **Discrete batch control**

- Configuration of up to six preset batch recipes
- One-stage or two-stage batch control
- End-of-batch warning and batch-overrun alarms
- Automatic overshoot compensation

#### Weights & Measures custody transfer

#### Note

If you are using the Weights & Measures application, you cannot use the Net Oil application.

- Physical and software security
- Security-alarm posting
- Mass or volume totalizer that can be configured by the user
- Compliant with MID 2014/32/EU Annex MI-005
- Certified by NTEP and OIML

#### **Concentration measurement**

Provides concentration measurement based on either industry-specific or liquid-specific units and relationships. Standard measurement options include:

- Industry-specific:
  - °Brix
  - Plato
  - Balling
  - Baumé at SG60/60
  - Specific gravity
- Liquid-specific:
- %HFCS
- Concentration derived from reference density
- Concentration derived from specific gravity

Additionally, the application can be customized for site-specific concentration measurement (such as %HNO<sub>3</sub>, %NaOH).

#### Petroleum measurement

Adds the following calculations to the standard software:

- Calculates base density (corrected API Gravity) and Ctl (the correction for the effect of temperature on a liquid)
- Calculates gross volume at standard temperature
- Calculates flow-weighted average temperature and flow-weighted average observed gravity (flowing density)

#### **Transient Bubble Remediation (TBR)**

Used with single-component liquid streams that may experience intermittent low levels of gas entrainment, that is, gas carryunder

- Enables accurate measurement of a single fluid during periods of entrained gas by providing a substitute density value based on the immediately preceding process density (standard configuration)
- Tracks total time of aerated flow to assist in diagnosing process issues that may cause aeration

#### **Transient Mist Remediation (TMR)**

- Used with gas streams that may experience intermittent low levels of liquid entrainment, i.e., liquid carry-over
- Allows gas measurement to continue during periods of entrained liquid (mist) by providing a substitute flow rate value based on the immediately preceding process flow rate
- Returns to reporting the measured flow rate when the mist interval is over, increased or decreased by a maximum of 10%, until flow totals are appropriately adjusted for the unmeasured flow
- Provides an indication of the amount of time that liquid was present in the stream identifying process improvements to reduce gas stream contamination

#### Net Oil (NOC)

#### Note

If you are using the Net Oil application, you cannot use the Weights & Measures custody transfer application.

- Designed for use with two-phase, three-phase, or compact separators
- Supports up to 48 wells, three well tests per well (well test mode), or continuous measurement of one well
- Measures and reports net oil and net water production
- Real-time water cut data based on process density or read from water cut probe
- Optionally reports gas production
- Enables recalculation of stored NOC data for different reference values

# **Electrical connections**

Connection type	Model 3300/3500 rack-mount	Model 3300/3500 panel-mount	Model 3350/3700 remote field- mount
Input/Output	<ul> <li>Type D connectors per DIN standard 41612 (IEC 603-2)</li> <li>Solder tails (standard)</li> <li>Wiring terminals (optional); accept wire 24 AWG (0.205 mm<sup>2</sup>) to 16 AWG (1.31 mm<sup>2</sup>)</li> </ul>	<ul> <li>Intrinsically safe version: Two pairs of wiring terminals for transmitter outputs</li> <li>Non-intrinsically safe analog outputs (output option A): Three pairs of wiring terminals for transmitter outputs</li> </ul>	<ul> <li>Two color-coded wiring compartments:</li> <li>Compartment with intrinsically safe terminals has two .75 in NPT or M20 × 1.5 conduit openings</li> <li>Compartment with non-intrinsically safe terminals has three .75 in NPT or M20 × 1.5 conduit openings</li> <li>Wiring terminals accept wire 22 AWG (0.326 mm<sup>2</sup>) to 16 AWG (1.31 mm<sup>2</sup>)</li> </ul>
Power	<ul> <li>Screw terminals are fixed to rack chassis</li> <li>Ground makes first and breaks last</li> </ul>	Screw terminals	
	All power supply screw terminals accept wire 22 AWG (0.326 mm <sup>2</sup> ) to 16 AWG (1.31 mm <sup>2</sup> )		/G (1.31 mm²)

Connection type	Model 3300/3500 rack-mount	Model 3300/3500 panel-mount	Model 3350/3700 remote field- mount
Service port	Two clips for temporary connection to the service port		One pair of terminals supports Modbus/RS-485 signal or service port mode. On device power-up, the user has 10 seconds to connect in service port mode. After 10 seconds, the terminals default to Modbus/ RS-485 mode.

# Sensor cabling

Specification	Value		
Requirements	With sensor interface code 5		
Applies to Model 3500/3700 only. Sensor cabling not applicable to Models 3300/3350.	<ul> <li>Requires standard 4-wire twisted-pair signal cable between the sensor and the transmitter. Micro Motion recommends using Micro Motion 4-wire cable.</li> </ul>		
	With sensor interface code 6		
	<ul> <li>Requires standard 4-wire twisted-pair shielded signal cable between the transmitter and the remote core processor. Micro Motion recommends using Micro Motion 4-wire cable.</li> </ul>		
	<ul> <li>Requires Micro Motion 9-wire signal cable between the remote core processor and the sensor.</li> </ul>		
	Depending on the order, 10 ft (3 m) of 4-wire cable or 10 ft (3 m) of both 4-wire and 9-wire cable are shipped with the order. For longer cable lengths, contact Micro Motion.		
Maximum cable	Cable type	Wire gauge	Maximum length
lengths between sensor and transmitter	Micro Motion 4-wire	Not applicable	<ul> <li>1,000 ft (305 m) without Ex- approval</li> </ul>
			<ul> <li>500 ft (152 m) with IIC rated sensors</li> </ul>
			<ul> <li>1,000 ft (305 m) with IIB rated sensors</li> </ul>
	Micro Motion 9-wire	Not applicable	60 ft (18 m)
	User-supplied 4-wire:	VDC 22 AWG (0.326 mm <sup>2</sup> )	300 ft (91 m)
		VDC 20 AWG (0.518 mm <sup>2</sup> )	500 ft (152 m)
		VDC 18 AWG (0.823 mm <sup>2</sup> )	1,000 ft (305 m)
		RS-485 22 AWG (0.326 mm²) or larger	1,000 ft (305 m)

# Input signal detail

Input	Description
One 2-wire frequency/pulse input	<ul> <li>Not intrinsically safe</li> </ul>
	<ul> <li>Frequency range: 0–15 khz</li> </ul>
	<ul> <li>Minimum pulse width: 25 μ-sec</li> </ul>
	<ul> <li>Power: Sourcing or sinking</li> </ul>
	<ul> <li>Voltage: 0–0.8 VDC low state; 3–30 VDC high state</li> </ul>
	<ul> <li>Current: Nominal 5 mA pull-up</li> </ul>
Two discrete momentary inputs	<ul> <li>Not intrinsically safe</li> </ul>
	<ul> <li>Pulse width: 0.15sec minimum</li> </ul>
	<ul> <li>Voltage: 0–0.8 VDC low state; 3–30 VDC high state</li> </ul>
	<ul> <li>Dry contacts</li> </ul>
One 4-wire Coriolis sensor signal input with ground	Intrinsically safe

# Output signal detail

Output	Description
Two active 4–20 mA Outputs	<ul> <li>Isolated to ±50VDC from all other outputs and earth ground</li> </ul>
	<ul> <li>Maximum load limit: 100 ohms</li> </ul>
	<ul> <li>Output is linear with process from 3.8 to 20.5 mA per NAMUR NE43 (February 2003)</li> </ul>
Three Discrete Outputs	<ul> <li>Not intrinsically safe</li> </ul>
	<ul> <li>Configurable for the application</li> </ul>
	<ul> <li>Polarity: Active high or active low, software selectable</li> </ul>
	<ul> <li>Power: Internal pull-up to 24V</li> </ul>
	<ul> <li>Current: Sourcing at 5.6 mA when Vout = VDC; Sinking up to 500 mA at 30 VDC maximum</li> </ul>

Output	Description
One 2-wire frequency/pulse output	<ul> <li>Not intrinsically safe</li> </ul>
	<ul> <li>Scalable to 10,000Hz</li> </ul>
	<ul> <li>Output is linear with flow rate to 2,500 Hz</li> </ul>
	<ul> <li>Pulse width: 50% duty cycle above the crossover frequency<sup>(1)</sup>; configurable between 0.543 ms and 277 ms</li> </ul>
	<ul> <li>Polarity: Active high or active low, software selectable</li> </ul>
	<ul> <li>Power: Active or passive, software selectable</li> </ul>
	<ul> <li>Voltage: 24 VDC nominal, active; 30 VDC applied maximum, passive</li> </ul>
	<ul> <li>Current: Sourcing at 10 mA at 3 VDC, active; Sinking at 500mA, active or passive</li> </ul>

(1) The crossover frequency depends on the configured value of the pulse width. At the minimum pulse width value of 0.543 ms, the crossover frequency is 922 Hz. At the maximum pulse width value of 277 ms, the crossover frequency is 1.8 Hz..

Fault actions	Description	
	When a fault is detected, outputs go to configured states. User can select upscale, downscale, internal zero, or none. Milliamp outputs conform to NAMUR NE43 (February 2003).	
Upscale	<ul> <li>Milliamp: 21 to 24 mA, user configurable</li> </ul>	
	<ul> <li>Frequency: 15,000 Hz</li> </ul>	
Downscale	<ul> <li>Milliamp: 1 to 3.6 mA, user configurable</li> </ul>	
	■ Frequency: 0 Hz	
Internal zero	Drives the mA and frequency	
None	Ignores fault conditions	

# **Digital communications**

Output type	Outputs and descriptions	
RS-485	One pair of terminals supports Service Port (SP) mode or RS-485 mode. In RS-485 mode the port can be used for Modbus/HART communication or as a printer port.	
	On device power-up, the user has 10 seconds to connect in SP mode. After 10 seconds, the terminals switch to RS-485 mode.	
	Service port mode	
	<ul> <li>Protocol: Modbus RTU</li> </ul>	
	Data rate: 38,400 baud	
	<ul> <li>Parity: no parity</li> </ul>	
	<ul> <li>Stop bit: one stop bit</li> </ul>	
	<ul> <li>Address: 111</li> </ul>	

Output type	Outputs and descriptions           RS-485 for Modbus/HART protocols	
	The transmitter can communicate via Modbus RTU, Modbus ASCII, or HART <sup>(1)</sup> protocols. The communication parameters are configurable with ProLink III software, Modbus, or the display. The shipped default parameters are:	
	<ul> <li>Data rate: 9600 baud</li> </ul>	
	<ul> <li>Parity: odd</li> </ul>	
	<ul> <li>Stop bit: one stop bit</li> </ul>	
	RS-485 for printer port	
	<ul> <li>When the RS-485 port is configured as a printer port, it cannot be used for any other function.</li> <li>Requires external RS-232 adapter (not included)</li> </ul>	
	<ul> <li>With Epson TM-U295 ticket printer, detects and reports "paper out" conditions</li> </ul>	
	<ul> <li>Is approved for use in custody transfer applications</li> </ul>	
HART/Bell 202 <sup>(1)</sup>	The HART Bell 202 signal is superimposed on the primary mA output, and is available for host system interface or for polling external measurement devices. The HART Bell 202 communication parameters are: <ul> <li>Frequency: 1.2 and 2.2 KHz</li> </ul>	
	<ul> <li>Amplitude: 0.8 mA peak-to-peak</li> </ul>	
	<ul> <li>Data rate: 1200 baud</li> </ul>	
	<ul> <li>Resistance: Loop requires 250 to 600 ohms resistance</li> </ul>	

(1) HART protocol supports configuration of basic transmitter functionality, configuration of the petroleum measurement application, and reading/ writing batch setpoints and totals. HART protocol does not support configuration of the batch, concentration measurement, or NOC applications. Both Modbus and the display provide configuration and control of all transmitter functionality.

# Power supply

Туре	Description	
AC power supply	■ 85 to 265 VAC	
	8 watts typical, 15 watts maximum	
	<ul> <li>IEC 60127-3 fuse, 0.63 A time-delay</li> </ul>	
	<ul> <li>Complies with low voltage directive 2006/95/EC per EN 61010-1 (IEC 61010-1) with amendment 2; Installation (Overvoltage) Category II, Pollution Degree 2</li> </ul>	
DC power supply	18 to 30 VDC	
	8 watts typical, 11 watts maximum	
	<ul> <li>IEC 60127-3 fuse, 1.6 A time-delay</li> </ul>	
	The user-supplied power conductors must be appropriately sized to provide 18 VDC minimum at the power terminals at a load current of 0.7 A.	

# **Environmental limits**

#### Table 1: Ambient temperature limits

Туре	Temperature limits
Operating	-4 °F (-20.0 °C) to 140 °F (60.0 °C)
Storage	-40 °F (-40.0 °C) to 158 °F (70.0 °C)

#### Table 2: Humidity and vibration limits

Туре	Values
Humidity limits	5 to 95% relative humidity, non-condensing at 140 °F (60.0 °C)
Vibration limits	Meets IEC 60068-2-6,endurance sweep, 5 to 2000 Hz up to 1.0 g

#### Table 3: Housing rating

Model	Values
Model 3350/3700	NEMA 4X (CSA) and IP66/IP67 (ATEX/IECEx)
Model 3300/3500	At least IP20

# Environmental effects

#### **EMI effects**

- Complies with EMC directive 2014/30/EU per EN 61326 Industrial
- Complies with NAMUR NE-21 (May 2012)
- Complies with NAMUR NE-21 (22.08.2007)

#### Ambient temperature effect

On analog outputs: ±0.005% of span per °C change from temperature at which the outputs were trimmed

# Model 3100 accessory specifications

Relays module:

- Three relays
- Solid state, SPST
- Rated at 24–250 VAC, 40 mA to 5A; or 0–70 VDC, 5A
- Energized by Discrete Outputs
- NEMA 4X (IP65) enclosure (optional)

# Hazardous area classifications

### **Model 3300**

#### UL and CSA

Approval Type	Approval	
UL and CSA		Class I, Div. 2, Groups A, B, C, and D when installed in a suitable enclosure

### **Model 3350**

Approval Type	Approval	
UL and CSA	C S US	Class I, Div. 2, Groups A, B, C, and D (standard housing)
ATEX	<b>C E</b> 0575 (Ex)	ATEX Zone 1 I 2G Ex de [ib] IIB/IIC T4 Gb
	<b>(</b> € <	IECEx Zone 1
IECEx		IECEx Zone 1 Ex de [ib] IIB/IIC T4 Gb

### **Model 3500**

Approval Type	Approval	
UL and CSA	C C C C C C C C C C C C C C C C C C C	Class I, Div. 2, Groups A, B, C, and D when installed in a suitable enclosure Provides non-incendive sensor outputs for use in Class I, Div. 2, Groups A, B, C, and D, or intrinsically safe sensor outputs for use in Class I, Div. 1, Groups C and D; Class II, Div. 1, Groups E, F, and G
ATEX	<b>CE</b> 0575 (Ex)	Safe area only: II (2) G [Ex ib] IIB/IIC Can be connected to a sensor in Zone 1 area if sensor is marked as Ex ib IIB/ IIC.

### **Model 3700**

Approval Type	Approval	
UL and CSA	C S C US	Class I, Div. 2, Groups A, B, C, and D Provides non-incendive sensor outputs for use in Class I, Div. 2, Groups A, B, C, and D, or intrinsically safe sensor outputs for use in Class I, Div. 1, Groups C and D; Class II, Div. 1, Groups E, F, and G
ATEX	<b>C E</b> 0575 (Ex)	ATEX Zone 1: II 2G Ex de [ib] IIB/IIC T4 Gb
IECEx		IECEx Zone 1 Ex de [ib] IIB/IIC T4 Gb

### Model 3100 Accessory (relays model)

#### UL and CSA

Approval Type	Approval	
UL and CSA	c e e e e e e e e e e e e e e e e e e e	Class I, Div. 2, Groups A, B, C, and D

# Marine approval classifications

Marine approval	Country
Lloyds Register ENV1, ENV2, ENV3, ENV5	United Kingdom
Det Norske Veritas- Germanischer Lloyd	Norway-Germany
Bureau Veritas	France
American Bureau of Shipping	USA
Nippon Kaiji Kyokai	Japan

# Physical specifications

#### Model 3300/3500 rack or panel mount

Specification	Value
Housing	Rack
	<ul> <li>19 in (483 mm) rack-mount housing meets DIN standard 41494 and IEC 297-3</li> </ul>
	Front panel is rated IP40. Front panel is aluminum with laminate overlay
	Panel
	<ul> <li>Front panel with bezel is rated NEMA 4X (IP65) Front panel is aluminum with laminate overlay</li> </ul>
Weight <sup>(1)</sup>	<ul> <li>Maximum 3.5 lb (1.59 kg), excluding prepared cables</li> </ul>
Terminal compartments	<ul> <li>Output terminals are physically separated from the power and service-port terminals.</li> </ul>
Standard interface/display	Display
	<ul> <li>Backlit LCD, 128 x 128 pixel, bit map</li> </ul>
	<ul> <li>Adjustable contrast</li> </ul>
	<ul> <li>Non-glare, chemical-resistant acrylic lens</li> </ul>
	Interface (keypad membrane switch)
	<ul> <li>Large push buttons with tactile feedback</li> </ul>
	<ul> <li>Software-defined function keys</li> </ul>
	Chemical-resistant polyester

(1) For transmitters integrally mounted to a sensor, you may need to add the weight of the transmitter to the sensor. Refer to the sensor product data sheet.


#### Model 3350 and 3700 remote field mount

Specification	Value
Housing	Compartment with threaded cover contains electronics.
	Terminal compartment contains:
	<ul> <li>Non-intrinsically safe compartment with input/output and power supply terminals</li> </ul>
	<ul> <li>Intrinsically safe compartment with interface/display, sensor terminals (Model 3700 only), and optional input and output terminals</li> </ul>
Weight <sup>(1)</sup>	■ 19 lb (8.6 kg)
Terminal compartments	Compartment with threaded cover contains electronics.
	Terminal compartment contains:
	<ul> <li>Non-intrinsically safe compartment with input/output and power supply terminals</li> </ul>
	<ul> <li>Intrinsically safe compartment with interface/display, sensor terminals (Model 3700 only), and optional input and output terminals</li> </ul>

Specification	Value
Mounting	<ul> <li>Mounting bracket and interface/display rotate to allow mounting in four different orientations</li> </ul>
Standard interface/display	Display
	<ul> <li>Backlit LCD, 128 x 128 pixel, bit map</li> </ul>
	<ul> <li>Adjustable contrast</li> </ul>
	<ul> <li>Non-glare, tempered glass lens</li> </ul>
	<ul> <li>Suitable for hazardous area installation</li> </ul>
	Interface (keypad membrane switch)
	<ul> <li>Large push buttons with tactile feedback</li> </ul>
	<ul> <li>Software-defined function keys</li> </ul>
	<ul> <li>Chemical-resistant polyester</li> </ul>

(1) For transmitters integrally mounted to a sensor, you may need to add the weight of the transmitter to the sensor. Refer to the sensor product data sheet.


### Rack-mount Model 3300/3500 dimensions

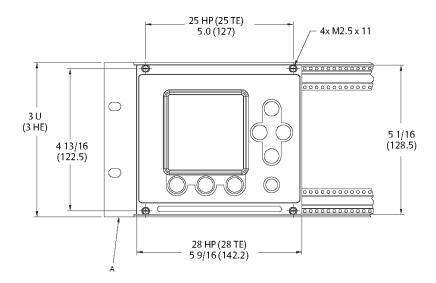

A. 19 in (483 mm) sub-rack conforms to EN 60297-3-101 and IEC 60297-3. Not included as part of Model 3300/3500

#### Note


- Dimensions are in inches (mm).
- 1 U = 1 HE = 1.750 in (44.45 mm)
- 1 HP = 1 TE = 0.200 in (5.08 mm)

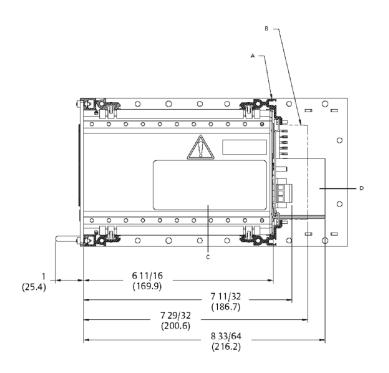


#### Note

Dimensions are in inches (mm).

- A. Rear rail for mounting connectors that conform to EN 60603-2 and IEC 60603-2. Not included as part of Model 3300/3500
- B. Wiring terminal connector (optional)
- C. Approvals tag
- D. Intrinsic safety shield (Model 3500 only)

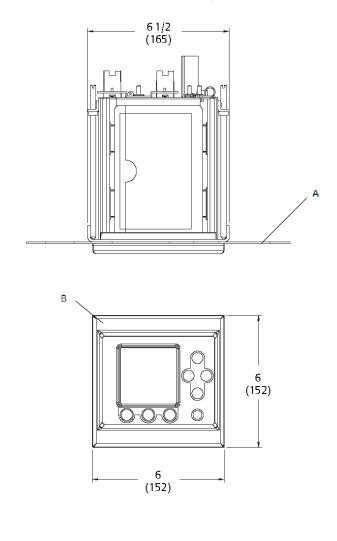


### Panel mount Model 3300/3500 with screw-type connectors

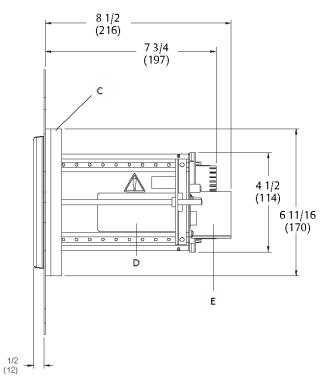

- A. Panel
- B. Bezel
- C. Frame
- D. Approvals tag
- E. Intrinsic safety barrier (Model 3500 only)

#### Note

Dimensions are in inches (mm).

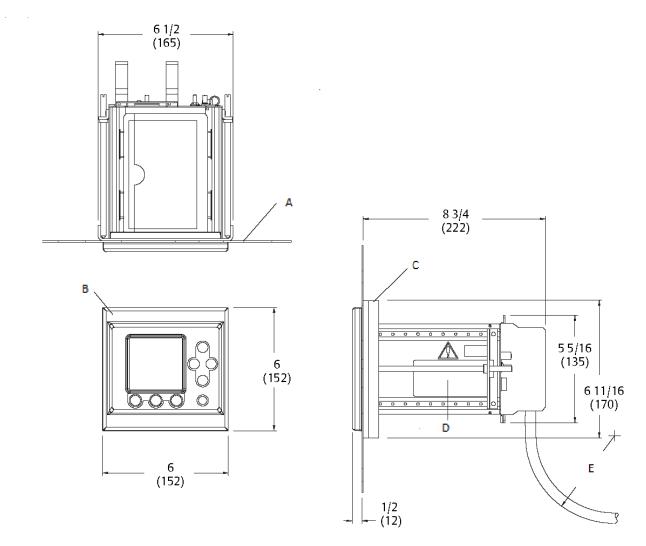


### Panel-mount Model 3300/3500 with optional I/O cable

- A. Panel
- B. Bezel
- C. Frame
- D. Approvals tag
- E. Minimum 4.25 in (107.9 mm) bend radius

#### Note

Dimensions are in inches (mm).

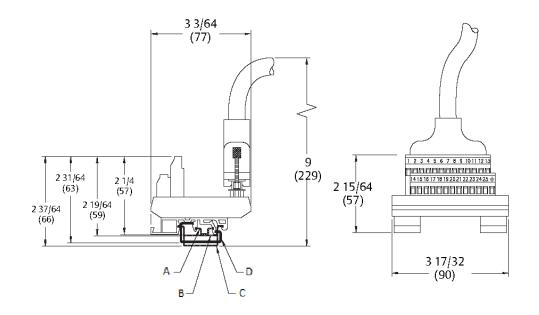

- A. DIN rail type TS 15
- B. DIN rail type TS 35 x 7.5
- C. DIN rail type TS  $35 \times 15$
- D. DIN rail type TS 32

# Ordering information

### **Model 3300**

#### Base model

Model	Product description
3300	MicroMotion Coriolis Discrete Controller MVD 3300 ; remote rack/panel-mount

#### Mounting

Code	Mounting options for Model 3300
R	DIN rack
Р	Panel-mount

#### Power

Code	Power options for Model 3300
1	85 to 265 VAC
2	18 to 30 VDC (recommended for 24 VDC users)

#### Communication

Code	Product description
A	No communication gateway module

#### Hardware

Code	Additional hardware modules for Model 3300
0	No additional hardware modules
1	Weights & Measures Custody Transfer (all other than OIML); Control Application code must be code D (Discrete Batch Controller)

#### Sensor

Code	Sensor interface for Model 3300
0	No sensor interface

#### Terminals

Code	Terminal options for Model 3300
В	Wiring terminals
С	Prepared cables; 2 ft (1 m) length; use with mounting code P only
D	Prepared cables; 5 ft (2 m) length; use with mounting code P only
E	Prepared cables; 10 ft (3 m) length; use with mounting code P only

#### **Relays and housings**

Code	Relays and housing options for Model 3300
1	No relays and housing

#### Approvals

Code	Approval options for Model 3300
М	Micro Motion Standard (no approval, with CE/EAC mark)
U	UL
С	CSA (Canada only)
А	CSA C-US (U.S.A. and Canada)

#### Language

Code	Language options for Model 3300
A	English local display; Danish quick reference guide; English manual
D	English local display; Dutch quick reference guide; English manual
E	English local display; English quick reference guide; English manual
F	French local display; French quick reference guide; French manual

Code	Language options for Model 3300
G	German local display; German quick reference guide; German manual
Н	English local display; Finnish quick reference guide; English manual
I	English local display; Italian quick reference guide; English manual
J	Japanese local display; Japanese quick reference guide; English manual
М	English local display; Chinese quick reference guide; Chinese manual
N	English local display; Norwegian quick reference guide; English manual
0	English local display; Polish quick reference guide; English manual
Р	English local display; Portuguese quick reference guide; English manual
S	English local display; Spanish quick reference guide; Spanish manual
W	English local display; Swedish quick reference guide; English manual
С	English local display; Czech CE requirements document, English manual and quick reference guide
В	English local display; Hungarian CE requirements document, English manual and quick reference guide
К	English local display; Slovak CE requirements document, English manual and quick reference guide
Т	English local display; Estonian CE requirements document, English manual and quick reference guide
U	English local display; Greek CE requirements document, English manual and quick reference guide
L	English local display; Latvian CE requirements document, English manual and quick reference guide
V	English local display; Lithuanian CE requirements document, English manual and quick reference guide
Y	English local display; Slovenian CE requirements document, English manual and quick reference guide

#### **Control software**

Code	Control application software for Model 3300
Z	Process monitor/totalizer (standard)
D	Discrete batch controller

#### Measurement software

Code	Measurement application software for Model 3300
Z	No measurement application software

#### Specialty applications

Code	Specialty applications for Model 3300
Z	No specialty applications
Х	ETO application

### **Model 3350**

#### Base model

Model	Product description
3350	Micro Motion Coriolis Discrete Controller; remote field-mount

#### Mounting

Code	Mounting options for Model 3350
А	Field-mount

#### Power

Code	Power options for Model 3350
1	85 to 265 VAC
2	18 to 30 VDC (recommended for 24 VDC users)

#### Communication

Co	de	Communication gateway module for Model 3350
A		No communication gateway module

#### Hardware

Code	Additional hardware modules for Model 3350
0	No additional hardware modules
1	Weights & Measures Custody Transfer (all other than OIML); Control Application code must be code D (Discrete Batch Controller)

#### Sensor

Code	Sensor interface for Model 3350
0	No sensor interface

#### **Conduit connections**

Code	Conduit connection options for Model 3350
A	M20 without glands
В	M20 with three increased safety glands
С	M20 with five increased safety glands
D	3/4-inch NPT without conduit seals

#### Approval

Code	Approval options for Model 3350
М	Micro Motion Standard (no approval, with CE/EAC mark)
U	UL
С	CSA (Canada only)
A	CSA (US and Canada)
I	IECEx EPL Gb, Ex de, Zone 1
Z	ATEX II 2G, Ex de, Zone 1
Р	NEPSI – Safe area Only available with language code M (Chinese)

#### Language

Code	Language options for Model 3350
А	Danish CE requirements document; English installation and configuration manuals
D	Dutch CE requirements document; English installation and configuration manuals
E	English installation manual; English configuration manual
F	French installation manual; French configuration manual
G	German installation manual; German configuration manual
Н	Finnish CE requirements document; English installation and configuration manuals
I	Italian installation manual; English configuration manual
J	Japanese installation manual; Japanese configuration manual
М	Chinese installation manual; Chinese configuration manual
N	Norwegian CE requirements document; English installation and configuration manuals
0	Polish installation manual; English configuration manual
Р	Portuguese installation manual; English configuration manual
S	Spanish installation manual; Spanish configuration manual
W	Swedish CE requirements document; English installation and configuration manuals
С	Czech CE requirements: English installation and configuration manuals
В	Hungarian CE requirements document; English installation and configuration manuals
К	Slovak CE requirements document; English installation and configuration manuals
Т	Estonian CE requirements document; English installation and configuration manuals
U	Greek CE requirements document; English installation and configuration manuals
L	Latvian CE requirements document; English installation and configuration manuals
V	Lithuanian CE requirements document; English installation and configuration manuals
Y	Slovenian CE requirements document; English installation and configuration manuals

#### Series 3000 Transmitters

#### Software 1

Code	Software options 1 for Model 3350
Z	Flow variable (standard)
J	Production volume reconciliation Available with software option 2 Z and C only
К	Transient mist remediation Available with software option 2 Z and C only
L	Transient bubble remediation Available with software option 2 Z and C only
R	Piece-wise linearization for gas Available with software option 2 Z and C only

#### Software 2

Code	Software options 2 for Model 3350
Z	No software options 2
С	Smart Meter Verification Not available with Mounting Option I, B, C, or P; Smart Meter Verification is not available with all sensors.
S	Safety certification of 4–20 mA output per IEC 61508 Only available with output code A or D
V	Safety Certification per IEC 61508 with Smart Meter Verification Not available with Mounting Option I, B, C, or P; Smart Meter Verification is not available with all sensors. Only available with output code A or D

#### Factory

Code	Factory options for Model 3350
Z	Standard product
Х	ETO product

#### Add on Options

Code	Add on options for Model 3350
CL	Hardware for cover lockout Hardware only; does not include Weights & Measures software
РК	2 in (51 mm) pipe mount U-bolt kit for electronics Not available with Mounting Option I
	Country specific approval (select one from the following if approval code G is selected)
R1	EAC Zone 2 - Hazardous Area Approval - Increased safety terminal compartment (Exe)
R2	EAC Zone 1 - Hazardous Area Approval - Flameproof terminal compartment
B1	INMETRO Zone 1 - Hazardous Area Approval - Increased safety terminal compartment
B2	INMETRO Zone 1 - Hazardous Area Approval - Flameproof terminal compartment

### **Model 3500**

#### Base model

Model	Product description
3500	Micro Motion 3500 controller transmitter remote rack/panel-mount

#### Mounting

Code	Mounting options for Model 3500
R	DIN rack
Р	Panel-mount

#### Power

Code	Power options for Model 3500
1	85 to 265 VAC
2	18 to 30 VDC (recommended for 24 VDC users)

#### Remote core processor

Code	Remote core processor options for Model 3500	
With sense	Nith sensor interface code 5	
A	None	
With sense	or interface code 6 (remote core processor)	
В	0.5 in (13 mm) NPT remote core processor no gland	
E	M20 remote core processor — no gland	
F	Remote core processor — brass/nickel cable gland Not available with Approval Code T or S	
G	Remote core processor — stainless steel cable gland Not available with Approval Code T or S	
К	JIS B0202 1/2G no gland (not available for quotes outside of Japan) Only available with Approval Code M	
L	Japan — brass nickel cable gland (not available for quotes outside of Japan) Only available with Approval Code M	
М	Japan — stainless steel cable gland (not available for quotes outside of Japan) Only available with Approval Code M	

#### Hardware

Code	Additional hardware modules for Model 3500
0	No additional hardware modules
1	Weights & Measures Custody Transfer (all other than OIML); Control Application code must be either code D or E (Discrete Batch Controller)

Code	Additional hardware modules for Model 3500
2	Weights & Measures Custody Transfer (OIML); MID 2004/22/EC compliant, based on OIML R117-1 and OIML R137-1; Evaluation Certificate TC7057
3	Marine Bunker Hardware; Must be used with CMF200, CMF300, CMF350, CMFHC, or F300 sensor; Not available with Approval Code U; Not available with Approval Code T or S

#### Sensor

Code	Sensor interface for Model 3500
5	4-wire MVD interface to sensors with core processors (includes 10 ft (3 m) 4-wire shielded PVC cable)
6	4-wire remote mount transmitter with 9-wire remote core processor to sensors with junction box; (includes 10 ft (3 m) each 9-wire shielded FEP and 4 wire shielded PVC cable)
7	<ul> <li>4-wire remote mount transmitter with 9-wire remote enhanced core processor to sensors with junction box;</li> <li>(includes 10 ft (3 m) each 9-wire shielded FEP and 4 wire shield PVC cable);</li> <li>Not available with Approval Codes T or S;</li> <li>Only avaiable with approvals M, C, A, B, or P</li> </ul>

#### Terminals

Code	Terminal options for Model 3500
В	Screw terminals
С	Prepared cables; 2 ft (1 m) length (use with mounting code P only)
D	Prepared cables; 5 ft (2 m) length (use with mounting code P only)
E	Prepared cables; 10 ft (3 m) length (use with mounting code P only)

#### **Relays and housings**

Code	Power options for Model 3500
1	No relays and housing

#### Approval

Code	Approval options for Model 3500
М	Micro Motion Standard (no approval, with CE/EAC mark)
U	UL Approval Code U is available with Remote Core Conduit Connections B or E only
С	CSA (Canada only)
A	CSA (US and Canada)
В	ATEX II (2) G [Ex ib] IIB/IIC
Р	NEPSI – Safe area Only available with language code M (Chinese)

Code	Approval options for Model 3500
G	Country Specific Approval Requires a selecction from the Approvals section of the "Certificate, Tests, Calibrations and Services" model code options.
	Only available with language code M (Chinese)

#### Language

Code	Language options for Model 3500
A	English local display; Danish quick reference guide; English manual
D	English local display; Dutch quick reference guide; English manual
E	English local display; English quick reference guide; English manual
F	French local display; French quick reference guide; French manual
G	German local display; German quick reference guide; German manual
Н	English local display; Finnish quick reference guide; English manual
I	English local display; Italian quick reference guide; English manual
J	Japanese local display; Japanese quick reference guide; English manual
М	English local display; Chinese quick reference guide; Chinese manual
Ν	English local display; Norwegian quick reference guide; English manual
0	English local display; Polish quick reference guide; English manual
Р	English local display; Portuguese quick reference guide; English manual
S	English local display; Spanish quick reference guide; Spanish manual
W	English local display; Swedish quick reference guide; English manual
В	English local display; Hungarian CE requirements document; English manual and quick reference guide
С	English local display; Czech CE requirements document; English manual and quick reference guide
К	English local display; Slovak CE requirements document; English manual and quick reference guide
L	English local display; Latvian CE requirements document; English manual and quick reference guide
Т	English local display; Estonian CE requirements document; English manual and quick reference guide
U	English local display; Greek CE requirements document; English manual and quick reference guide
V	English local display; Lithuanian CE requirements document; English manual and quick reference guide
Υ	English local display; Slovenian CE requirements document; English manual and quick reference guide

#### Control software

Code	Control application software for Model 3500
Z	Process monitor/totalizer (standard)
С	Process monitor/totalizer; with Smart Meter Verification; Structural integrity method; Requires the transmitter to be connected to an enhanced core processor; Not available with Sensor Interface Code 6
D	Discrete batch controller

Code	Control application software for Model 3500
E	Discrete batch controller; with Smart Meter Verification; Structural integrity method; Requires the transmitter to be connected to an enhanced core processor; Not available with Sensor Interface Code 6
F	Marine Bunker Transfer Package; Available with Additional Hardware Code 3 only; Not available with Approval Code T or C
Н	Marine Bunker Transfer Package and Smart Meter Verification; Structural integrity method; Available with Additional Hardware Code 3 only; Not available with Approval Code T or C

#### **Measurement software**

Code	Measurement application software for Model 3500
Z	No measurement application software
G	Concentration measurement Control application software must be Code Z, C, D, or E
В	Concentration measurement with predefined algorithms for food and beverage Control application software must be Code Z, C, D, or E
A	Petroleum measurement Control application software must be Code Z, C, D, or E
N	Net Oil Computer; Control software code must be C or Z

#### Specialty applications

Code	Specialty applications for Model 3500
Z	No specialty applications
Х	ETO application

#### Add on options

Code	Add on options for Model 3500 <sup>(1)</sup>
R4	EAC safe area only
B4	INMETRO safe area only

(1) Country Specific Approvals (must select only one when Approvals code G is selected)

### **Model 3700**

#### Base model

Model	Product description
3700	Micro Motion Coriolis multivariable transmitter and discrete controller; remote field-mount

#### Mounting

Code	Mounting options for Model 3700
А	Field mount

#### Power

Code	Power options for Model 3700
1	85 to 265 VAC
2	18 to 30 VDC (recommended for 24 VDC users)

#### Remote core processor

Code	Remote core processor options for Model 3700
With sensor	interface code 5
A	None
With sensor	interface code 6 (remote core processor)
В	0.5 in (13 mm) NPT remote core processor no gland
E	M20 remote core processor — no gland
F	Remote core processor — brass/nickel cable gland
G	Remote core processor — stainless steel cable gland
К	JIS B020G — no gland (not available for quotes outside of Japan)
L	Japan — brass nickel cable gland (not available for quotes outside of Japan)
М	Japan — stainless steel cable gland (not available for quotes outside of Japan)

#### Hardware

Code	Additional hardware modules for Model 3700
0	No additional hardware modules
1	Weights & Measures Custody Transfer (all other than OIML); Control Application code must be either code D or E (Discrete Batch Controller)
2	Weights & Measures Custody Transfer (OIML); MID 2004/22/EC compliant, based on OIML R117-1 and OIML R137-1; Evaluation Certificate TC7057; Not a available with Approval Code P
3	Marine Bunker hardware; Must be used with CMF200, CMF300, CMF350, CMF400, CMFHC< or F300 sensor; Not available with Approval Code U; Requires the use of a 4-wire interface to an enhanced core processor; Not available with sensor interface code 6

#### Sensor

Code	Sensor interface for Model 3700
5	4-wire interface to sensors with core processors (includes 10 ft (3 m) 4-wire shielded PVC cable)

Code	Sensor interface for Model 3700
6	4-wire remote mount transmitter with 9-wire remote core processor to sensors with junction box (includes 10 ft (3 m) each 9-wire shielded FEP and 4-wire shielded PVC cable)
7	4-wire remote mount transmitter with 9-wire remote enhanced core processor to sensors with junction box (includes 10 ft (3 m) each 9-wire shielded FEP and 4-wire shielded PVC cable); Only available with Approval Code G

#### **Conduit connections**

Code	Conduit connection options for Model 3700
A	M20 without glands
В	M20 with three brass nickel increased safety glands
С	M20 with five brass nickel increased safety glands
D	0.75 in (19.0 mm) NPT without conduit seals
S <sup>(1)</sup>	Japan - with three 1/2G brass nickel cable glands
T <sup>(1)</sup>	Japan - with five 1/2G brass nickel cable glands
U <sup>(1)</sup>	Japan - with three 1/2G stainless steel cable glands
V <sup>(1)</sup>	Japan - with five 1/2G stainless steel cable glands

(1) Only available with Approval code M. Not available for quotes outside of Japan.

#### Approval

Code	Approval options for Model 3700
М	Micro Motion standard (no approval)
U	UL Approval Code U is available with Remote Core Conduit Connections B or E and standard Conduit connection codes A or D only.
С	CSA (Canada only)
A	CSA (US and Canada)
I	IECEx EPL Gb, Ex de [ib], Zone 1 Flameproof
Z	ATEX II 2 G, Ex de [ib], Zone 1
G	Country Specific Approval Requires a selection from the Approvalas sectcion of the 'Certificate, Tests, Calibrations and Services' model option codes.
Р	NEPSI – Safe area Only available with language code M (Chinese)

#### Language

Code	Language options for Model 3700
A	English local display; Danish quick reference guide; English manual
D	English local display; Dutch quick reference guide; English manual
E	English local display; English quick reference guide; English manual

Code	Language options for Model 3700
F	French local display; French quick reference guide; French manual
G	German local display; German quick reference guide; German manual
н	English local display; Finnish quick reference guide; English manual
I	English local display; Italian quick reference guide; English manual
J	Japanese local display; Japanese quick reference guide; English manual
М	English local display; Chinese quick reference guide; Chinese manual
N	English local display; Norwegian quick reference guide; English manual
0	English local display; Polish quick reference guide; English manual
Р	English local display; Portuguese quick reference guide; English manual
S	English local display; Spanish quick reference guide; Spanish manual
W	English local display; Swedish quick reference guide; English manual
В	English local display; Hungarian CE requirements document; English manual and quick reference guide
С	English local display; Czech CE requirements document; English manual and quick reference guide
К	English local display; Slovak CE requirements document; English manual and quick reference guide
L	English local display; Latvian CE requirements document; English manual and quick reference guide
Т	English local display; Estonian CE requirements document; English manual and quick reference guide
U	English local display; Greek CE requirements document; English manual and quick reference guide
V	English local display; Lithuanian CE requirements document; English manual and quick reference guide
Υ	English local display; Slovenian CE requirements document; English manual and quick reference guide

#### **Control software**

Code	Control application software for Model 3700
Z	Process monitor/totalizer (standard)
С	Process monitor/totalizer; with Smart Meter Verification; Structural integrity method; Requires the transmitter to be connected to an enhanced core processor.
D	Discrete batch controller
E	Discrete batch controller; with Smart Meter Verification; Structural integrity method; Requires the transmitter to be connected to an enhanced core processor.
F	Marine Bunker Transfer Package; Available with Additional Hardware Code 3 only.
Н	Marine Bunker Transfer Package and Smart Meter Verification; Structural integrity method; Available with Additional Hardware Code 3 only

#### Measurement software

Code	Measurement application software for Model 3700
Z	No measurement application software

Code	Measurement application software for Model 3700
G	Concentration measurement Control Application Software must be Code Z, C, D, or E
В	Concentration measurement with predefined algorithms for food and beverage Control Application Software must be Code Z, C, D, or E
A	Petroleum measurement Control Application Software must be Code Z, C, D, or E
N	Net Oil Computer; Control software code must be C or Z

#### Specialty applications

Code	Specialty applications for Model 3700
Z	No specialty applications
Х	ETO application

#### Add on option

Code	Specialty applications for Model 3700	
LR	Lloyd's BV and DNV Approval for Marine (includes necessary hardware) Must be used with CMF400 or CMFHC sensor	
Country Spec	Country Specific Approvals (must select only one when approvals option G selected)	
R1	EAC Zone 1 Hazardous Area Approval Only available with Approval Code G	
B1	INMETRO Zone 1 Hazardous Area Approval Only available with Approval Code G	

### Model 3100 high energy relay

#### **Base model**

Model	Product description
3100	Micro Motion multivariable transmitter and discrete controller; remote rack/panel-mount

#### Device (order separately)

Code	Mounting options for Model 3100
A	3 relays; 24–250 VAC; 5A
В	3 relays; 0–70 VDC; 5A

#### Housing

Code	Power options for Model 3100
1	No housing
2	NEMA 4X housing for relays only

#### **Future expansion**

Code	Future expansion options for Model 3100
A	Reserved for future use

#### Approval

Code	Approval options for Model 3100
М	Micro Motion standard (no approval)
U	UL Class 1, Div. 2, Groups A, B, C, and D
С	CSA Class 1, Div. 2, Groups A, B, C, and D