



# **Product Information**

# Radar

Level measurement in bulk solids VEGAPULS 67, SR 68, 68 and 69





# Contents

1	Measuring principle
2	Type overview
	Instrument selection
	Selection criteria
5	Housing overview
	Mounting
	Electronics - 4 20 mA/HART - two-wire
	Electronics - 4 20 mA/HART - four-wire
	Electronics - Profibus PA
	Electronics - Foundation Fieldbus
	Electronics - Modbus
	Operation
13	Dimensions

# Take note of safety instructions for Ex applications



Please note the Ex specific safety information which you can find on our homepage <u>www.vega.com/downloads</u> under "*Approvals*" and which comes with every instrument. In hazardous areas you should take note of the corresponding regulations, conformity and type approval certificates of the sensors and power supply units. The sensors must only be operated on intrinsically safe circuits. The permissible electrical values are stated in the certificate.

# VEGA

# 1 Measuring principle

## Measuring principle VEGAPULS 67, SR 68, 68

Extremely short microwave pulses are emitted by the antenna system in the direction of the measured product, reflected by the product surface and received back again by the antenna system. They propagate at the speed of light. The time from emission to reception of the signals is proportional to the level in the vessel.

A special time stretching procedure allows reliable and precise measurement of the extremely short times.

The VEGAPULS 67, SR 68, 68 radar sensors work with low emitted power in the K-band frequency range.

#### **Measuring principle VEGAPULS 69**

The instrument emits a continuous radar signal via its lens-shaped antenna. This signal is frequency modulated with a sawtooth form. The emitted signal is reflected by the medium and received by the antenna as echo.

The frequency of the received signal always deviates from the actual emitted frequency. The frequency difference is calculated by special algorithms in the sensor electronics. It is proportional to the level in the vessel.

The VEGAPULS 69 operates with low emitted power in the W-band frequency range.

# Optimized for bulk solids

Due to the very good signal focussing, internal silo installations or buildup on the vessel wall do not influence the measurement. A high sensitivity electronics adapted to the requirements of bulk solids measurement enables reliable level measurement of different products up to 120 m. The measuring principle is unaffected by strong dust generation, filling noise, air flow due to pneumatic filling and temperature fluctuations. The application areas extend from the food industry and plastics processing to steel production and minerals processing.

#### Input variable

The measured variable is the distance between the process fitting of the sensor and the product surface. The reference plane is the seal surface of the flange.

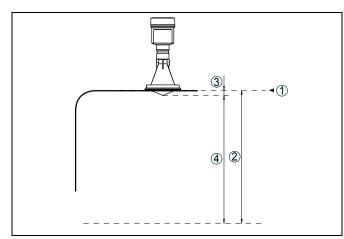


Fig. 1: Data of the input variable

#### 1 Reference plane

- 2 Measured variable, max. measuring range
- 3 Antenna length4 Useful measuring
- 4 Useful measuring range



# 2 Type overview



Applications	cations         Bulk solids         Bulk solids under extremely difficult process conditions		Bulk solids under extremely difficult process conditions	
Max. measuring range	15 m (49.21 ft)	30 m (98.43 ft)	75 m (246.1 ft)	
Antenna/Material	Completely encapsulated plastic horn antenna/PP	Horn or parabolic antenna/316L	Horn or parabolic antenna/316L	
<b>3</b>		Thread G1 <sup>1</sup> / <sub>2</sub> A/316L according to DIN 3852-A or flange/316L	Thread G1 <sup>1</sup> / <sub>2</sub> A/316L according to DIN 3852-A or flange/316L	
Process temperature	-40 +80 °C (-40 +176 °F)	-40 +250 °C (-40 +482 °F)	-196 +450 °C (-321 +842 °F)	
Process pressure	-1 +2 bar/-100 +200 kPa (- -14.5 +29.0 psig)	kPa (1 +100 bar/-100 +10000 kPa (-1 +160 bar/-100 +16000 kPa (-14.5 +1450 psi) (-14.5 +2320 psi)		
Deviation	±2 mm	±2 mm	±2 mm	
Frequency range	K-band	K-band	K-band	
Signal output	<ul> <li>4 20 mA/HART two-wire</li> <li>4 20 mA/HART - four-wire</li> <li>Profibus PA</li> <li>Foundation Fieldbus</li> <li>Modbus, Levelmaster protocol</li> </ul>	<ul> <li>4 20 mA/HART two-wire</li> <li>4 20 mA/HART - four-wire</li> <li>Profibus PA</li> <li>Foundation Fieldbus</li> <li>Modbus, Levelmaster protocol</li> </ul>	<ul> <li>4 20 mA/HART two-wire</li> <li>4 20 mA/HART - four-wire</li> <li>Profibus PA</li> <li>Foundation Fieldbus</li> <li>Modbus, Levelmaster protocol</li> </ul>	
Indication/Adjustment PLICSCOM PACTware VEGADIS 81 VEGADIS 82		<ul> <li>PLICSCOM</li> <li>PACTware</li> <li>VEGADIS 81</li> <li>VEGADIS 82</li> </ul>	<ul> <li>PLICSCOM</li> <li>PACTware</li> <li>VEGADIS 81</li> <li>VEGADIS 82</li> </ul>	
Approvals	<ul> <li>ATEX</li> <li>IEC</li> <li>FM</li> <li>CSA</li> </ul>	IEC • IEC • IEC FM • Shipbuilding • Shipbuilding		



**VEGAPULS 69** 



Applications	Bulk solids under extremely difficult process conditions		
Max. measuring range	120 m (393.7 ft)		
Antenna/Material	Horn antenna/PP or lens antenna/PEEK		
Process fitting/Material	Mounting strap/316L, flange/PP, flange/316L		
Process temperature	-40 +200 °C (-40 +392 °F)		
Process pressure	-1 3 bar (-100 300 kPa/-14.5 43.5 psig)		
Deviation	±5 mm		
Frequency range	W-band		
Signal output	<ul> <li>4 20 mA/HART two-wire</li> <li>4 20 mA/HART - four-wire</li> <li>Profibus PA</li> <li>Foundation Fieldbus</li> <li>Modbus, Levelmaster protocol</li> </ul>		
Indication/Adjustment	<ul> <li>PLICSCOM</li> <li>PACTware</li> <li>VEGADIS 81</li> <li>VEGADIS 82</li> </ul>		
Approvals	<ul> <li>ATEX</li> <li>IEC</li> <li>Shipbuilding</li> <li>FM</li> <li>CSA</li> </ul>		

# 3 Instrument selection

# **Application areas**

# **VEGAPULS 67**

VEGAPULS 67 is suitable for level measurement of bulk solids. Its mechanical construction and electronics are optimised for this application.

Application possibilities can be found in the food processing industry, in plastics processing and steel production as well as in the building industry.

# **VEGAPULS SR 68 and VEGAPULS 68**

VEGAPULS SR 68 and VEGAPULS 68 are designed for level measurement of bulk solids even under the most difficult process conditions. Their mechanical construction as well as electronics are optimised for this application.

#### **VEGAPULS 69**

The VEGAPULS 69 is a radar sensor for continuous measurement of bulk solids, even under difficult process conditions and with large measuring ranges. It is ideal for use in high, slender silos, with poorly reflecting bulk solids such as fly ash, plastic granules or wood chips as well as strong interfering reflections from regular installations.

# Applications

#### Measurement with flange mounting

For mounting VEGAPULS 67 on a socket, an appropriate compression flange for DN 80 (ASME 3" or JIS 80) as well as a suitable adapter flange are available.

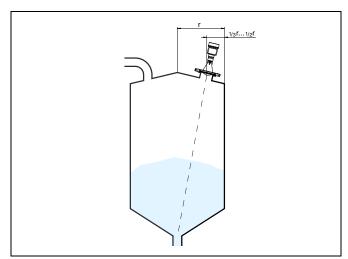


Fig. 2: Flange mounting of VEGAPULS 67

#### Measurement setups with mounting strap

The mounting strap enables simple mounting on the vessel wall or silo top. It is suitable for wall, ceiling or boom mounting. Especially in open vessels this is a very easy and effective way to align the sensor to the bulk solid surface.

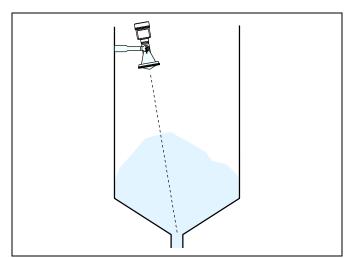


Fig. 3: VEGAPULS 67 with mounting strap

#### Measurement with swivelling holder

If mounting in the centre of the silo is not possible, the sensor can be directed to the vessel center by using the optional swivelling holder. The following illustration shows a simple way to determine the required angle of inclination.

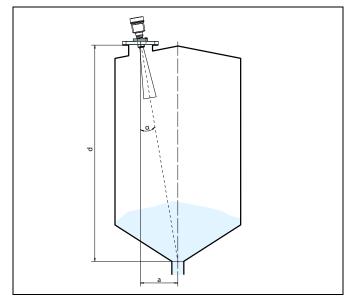


Fig. 4: VEGAPULS SR 68 or VEGAPULS 68 with swivelling holder



# 4 Selection criteria

		VEGAPULS 67	VEGAPULS SR 68	VEGAPULS 68	VEGAPULS 69
Vessel	Small to medium-size vessels	•	•	•	•
	Medium-size to large vessels	_	٠	•	٠
	Large vessel	_	-	•	٠
	Very large vessels	-	_	•	•
Process	Simple process conditions	•	٠	•	٠
	Extremely difficult process conditions	-	٠	•	_
Installation	Threaded fittings	-	٠	•	٠
	Flange connections	•	٠	•	•
	Mounting strap	•	_	-	•
Antenna	Swivelling holder	•	٠	•	•
	Plastic antenna	•	_	-	•
	Horn antenna	-	٠	•	•
	Metal encapsulated lens antenna	-	_	-	٠
	Parabolic antenna	_	٠	•	-
Suitability for industry-spe-	Aggregates and mining industry	•	٠	•	٠
cific applications	Chemical	•	٠	•	٠
	Power generation	_	٠	•	٠
	Foodstuffs	•	•	•	•
	Metal production	•	٠	•	٠
	Offshore	_	٠	•	-
	Paper	•	٠	•	-
	Petrochemical	-	٠	•	-
	Pharmaceutical	-	•	•	_
	Environment and recycling industry	•	•	•	-
	Cement industry	•	•	•	•



# 5 Housing overview

VEGASWING 61, 63, 66

Plastic PBT	•		
Protection rating	IP 66/IP 67	IP 66/IP 67	
Version	Single chamber	Double chamber	
Application area	Industrial environment	Industrial environment	

Aluminium			
Protection rating	IP 66/IP 67, IP 66/IP 68 (1 bar)	IP 66/IP 67, IP 66/IP 68 (1 bar)	
Version	Single chamber	Double chamber	
Application area	Industrial environment with increased mechanical stress	Industrial environment with increased mechanical stress	

Stainless steel 316L			
Protection rating	IP 66/IP 67	IP 66/IP 67, IP 66/IP 68 (1 bar)	IP 66/IP 67, IP 66/IP 68 (1 bar)
Version	Single chamber, electropolished	Single chamber, precision casting	Double chamber, precision casting
Application area	Aggressive environment, food pro- cessing, pharmaceutical	Aggressive environment, extreme me- chanical stress	Aggressive environment, extreme me- chanical stress



# 6 Mounting

## Mounting examples

The following illustrations show mounting examples and measurement setups.

#### **Plastic granules**

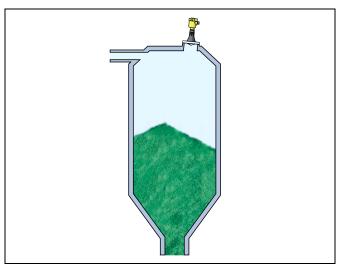


Fig. 5: Level measurement in a plastic granules silo with VEGAPULS 67

Plastic granules and powder are often stored in high, narrow silos which are filled pneumatically. Typical conditions are filling noise, material cones and poor reflective properties.

The high sensitivity of the VEGAPULS 67 sensor guarantees ample performance reserves for reliable level measurement even with widely varying product surface geometries.

#### **Fine lime**

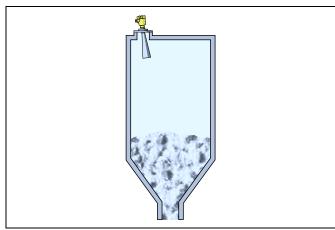


Fig. 6: Level measurement in a lime silo with VEGAPULS SR 68

Due to the extreme dust generation during the filling of powders, a noncontact measurement with ultrasonics is virtually impossible. The VEGA-PULS SR 68 is the ideal solution since microwaves are unaffected by dust generation and the filling stream.

The VEGAPULS SR 68 radar sensor is the ideal measuring instrument for this application. With a swivelling holder it can be optimally aligned to the product surface.

## **Clinker silo**



Fig. 7: Level measurement in a clinker silo with VEGAPULS 68

Clinker is an additive for concrete and is stored in large silos or bunkers. Its abrasive properties as well as extreme dust generation during filling place heavy demands on the level measurement.

The VEGAPULS 68 sensor is the optimum solution for level measurement. Its parabolic antenna powerfully focuses the microwaves, thus generating a strong useful signal. Interference from struts or installations is excluded.

# **Cement silo**

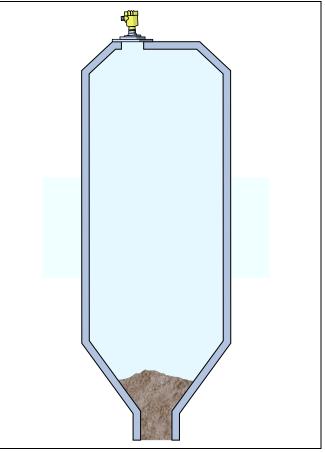


Fig. 8: Level measurement in a cement silo with VEGAPULS 69

Cement is stored in high and very slender silos. The abrasive properties as well as the extreme dust generation during filling make high demand on the level measurement.



The VEGAPULS 69 sensor is the optimum solution for level measurement. The high emitting frequency and its antenna powerfully focus the microwaves, thus generating a strong useful signal. Interference from struts or installations is excluded.



# 7 Electronics - 4 ... 20 mA/HART - two-wire

# **Configuration of the electronics**

The pluggable electronics is mounted in the electronics compartment of the instrument and can be exchanged by the user when servicing is required. The electronics is completely encapsulated to protect against vibration and moisture.

The terminals for voltage supply as well as the contact pins with  $l^2C$  interface for parameter adjustment are located on the upper side of the electronics. In the double-chamber housing, the terminals are located in the separate terminal compartment.

# Voltage supply

Power supply and current signal are carried on the same two-wire cable. The operating voltage can differ depending on the instrument version.

You can find the data of the voltage supply in chapter "*Technical data*" in the operating instructions manual of the respective instrument.

Provide a reliable separation between the supply circuit and the mains circuits according to DIN EN 61140 VDE 0140-1.

Data of the voltage supply:

- Operating voltage
- 9.6 ... 36 V DC
- Permissible residual ripple Non-Ex, Ex-ia instrument
  - for 9.6 V<sub>< U<sub>N</sub></sub> < 14 V:  $\leq$  0.7 V<sub>eff</sub> (16 ... 400 Hz)
  - for 18 V<sub>< U<sub>N</sub></sub> < 36 V:  $\leq$  1.0 V<sub>eff</sub> (16 ... 400 Hz)

 $Keep \ in \ mind \ the \ following \ additional \ influences \ for \ the \ operating \ voltage:$ 

- Lower output voltage of the power supply unit under nominal load (e.g. with a sensor current of 20.5 mA or 22 mA in case of fault)
- Influence of additional instruments in the circuit (see load values in chapter "*Technical data*" of the operating instructions of the respective instrument)

# **Connection cable**

The instrument is connected with standard two-wire cable without screen. If electromagnetic interference is expected which is above the test values of EN 61326-1 for industrial areas, screened cable should be used.

In the product configurator of VEGAPULS, different cable glands can be selected. They cover all cable diameters in the range of 4  $\dots$  12 mm (0.16  $\dots$  0.47 in).

We generally recommend the use of screened cable for HART multidrop mode.

# Cable screening and grounding

If screened cable is required, we recommend connecting the cable screen on both ends to ground potential. In the sensor, the screen must be connected directly to the internal ground terminal. The ground terminal on the outside of the housing must be connected to the ground potential (low impedance).

# Connection

## Single chamber housing

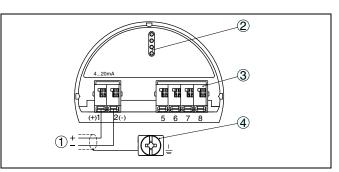


Fig. 9: Electronics and terminal compartment, single chamber housing

- 1 Voltage supply/Signal output
- 2 For display and adjustment module or interface adapter
- 3 For external display and adjustment unit
- 4 Ground terminal for connection of the cable screen

#### **Double chamber housing**

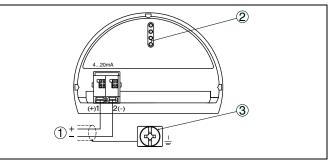


Fig. 10: Terminal compartment, double chamber housing

- 1 Voltage supply/Signal output
- 2 For display and adjustment module or interface adapter
- 3 Ground terminal for connection of the cable screen



# 8 Electronics - 4 ... 20 mA/HART - four-wire

#### **Configuration of the electronics**

The pluggable electronics is mounted in the electronics compartment of the instrument and can be exchanged by the user when servicing is required. The electronics is completely encapsulated to protect against vibration and moisture.

The contact pins with  $l^2C$  interface for parameter adjustment are located on the upper side of the electronics. The terminals for the power supply are located in the separate connection compartment.

# Voltage supply

If a reliable separation is required, the power supply and the current output are transmitted over separate two-wire connection cables.

- Operating voltage with version for low voltage
   9.6 ... 48 V DC, 20 ... 42 V AC, 50/60 Hz
- Operating voltage with version for mains voltage
   90 ... 253 V AC, 50/60 Hz

# **Connection cable**

The 4  $\dots$  20 mA current output is connected with standard two-wire cable without screen. If electromagnetic interference is expected which is above the test values of EN 61326 for industrial areas, screened cable should be used.

For power supply, an approved installation cable with PE conductor is required.

An outer cable diameter of 5  $\dots$  9 mm ensures the seal effect of the respective cable entry.

# Cable screening and grounding

If screened cable is required, we recommend connecting the cable screen on both ends to ground potential. In the sensor, the screen must be connected directly to the internal ground terminal. The ground terminal on the outside of the housing must be connected to the ground potential (low impedance).

#### Connection, double chamber housing

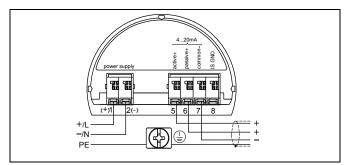


Fig. 11: Terminal compartment, double chamber housing

1 Voltage supply

- 2 4...20 mA signal output active
- 3 4 ... 20 mA signal output passive



# 9 Electronics - Profibus PA

# **Configuration of the electronics**

The pluggable electronics is mounted in the electronics compartment of the instrument and can be exchanged by the user when servicing is required. The electronics is completely encapsulated to protect against vibration and moisture.

The terminals for voltage supply as well as the plug with  $I^2C$  interface for parameter adjustment are located on the upper side of the electronics. In the double-chamber housing, these connection elements are located in the separate terminal compartment.

# Voltage supply

The voltage supply is provided by a Profibus  $\ensuremath{\mathsf{DP}}\xspace$  /PA segment coupler.

Data of the voltage supply:

- Operating voltage
- 9 ... 32 V DC
- Max. number of sensors per DP/PA segment coupler
- 32

# **Connection cable**

Connection is carried out with screened cable according to Profibus specification.

In the product configurator of VEGAPULS, different cable glands can be selected. They cover all cable diameters in the range of 4  $\dots$  12 mm (0.16  $\dots$  0.47 in).

Make sure that the entire installation is carried out according to the Profibus specification. In particular, make sure that the bus is terminated with suitable terminating resistors.

# Cable screening and grounding

In systems with potential equalisation, connect the cable screen directly to ground potential at the power supply unit, in the connection box and at the sensor. The screen in the sensor must be connected directly to the internal ground terminal. The ground terminal outside on the housing must be connected to the potential equalisation (low impedance).

In systems without potential equalisation, connect the cable screen directly to ground potential on the power supply unit and the sensor. In the connection box or T-distributor, the screen of the short stub to the sensor may not be connected to ground potential or to another cable screen.

# Connection

# Single chamber housing

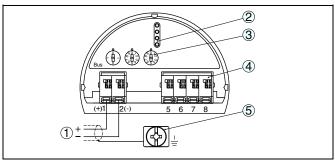


Fig. 12: Electronics and terminal compartment, single chamber housing

- 1 Voltage supply/Signal output
- 2 For display and adjustment module or interface adapter
- 3 Selection switch for bus address
- 4 For external display and adjustment unit
- 5 Ground terminal for connection of the cable screen

# Double chamber housing

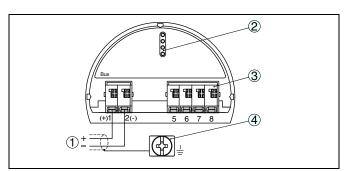


Fig. 13: Terminal compartment, double chamber housing

- 1 Voltage supply/Signal output
- 2 For display and adjustment module or interface adapter
- 3 Ground terminal for connection of the cable screen



# 10 Electronics - Foundation Fieldbus

#### **Configuration of the electronics**

The pluggable electronics is mounted in the electronics compartment of the instrument and can be exchanged by the user when servicing is required. The electronics is completely encapsulated to protect against vibration and moisture.

The terminals for voltage supply as well as the plug with  $I^2C$  interface for parameter adjustment are located on the upper side of the electronics. In the double-chamber housing, these connection elements are located in the separate terminal compartment.

# Voltage supply

Power supply via the H1 Fieldbus cable.

Data of the voltage supply:

- Operating voltage
- 9... 32 V DC
- max. number of sensors
   32
- 32

# **Connection cable**

Connection is carried out with screened cable according to Fieldbus specification.

In the product configurator of VEGAPULS, different cable glands can be selected. They cover all cable diameters in the range of 4  $\dots$  12 mm (0.16  $\dots$  0.47 in).

Make sure that the entire installation is carried out according to the Fieldbus specification. In particular, make sure that the bus is terminated with suitable terminating resistors.

# Cable screening and grounding

In systems with potential equalisation, connect the cable screen directly to ground potential at the power supply unit, in the connection box and at the sensor. The screen in the sensor must be connected directly to the internal ground terminal. The ground terminal outside on the housing must be connected to the potential equalisation (low impedance).

In systems without potential equalisation, connect the cable screen directly to ground potential on the power supply unit and the sensor. In the connection box or T-distributor, the screen of the short stub to the sensor may not be connected to ground potential or to another cable screen.

# Connection

#### Single chamber housing

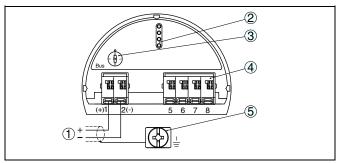


Fig. 14: Electronics and terminal compartment, single chamber housing

- 1 Voltage supply/Signal output
- 2 Contact pins for the display and adjustment module or interface adapter
- 3 Selection switch for bus address
- 4 For external display and adjustment unit
- 5 Ground terminal for connection of the cable screen

#### **Double chamber housing**

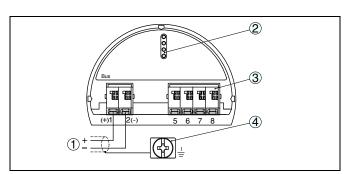


Fig. 15: Terminal compartment, double chamber housing

- 1 Voltage supply/Signal output
- 2 For display and adjustment module or interface adapter
- 3 Ground terminal for connection of the cable screen



# 11 Electronics - Modbus

## **Configuration of the electronics**

The pluggable electronics is mounted in the electronics compartment of the instrument and can be exchanged by the user when servicing is required. The electronics is completely encapsulated to protect against vibration and moisture.

The contact pins with  $l^2C$  interface for parameter adjustment are located on the upper side of the electronics. The terminals for the power supply are located in the separate connection compartment.

# Voltage supply

Power supply via the Modbus host (RTU)

- Operating voltage
   8 ... 30 V DC
- max. number of sensors
  - 32

# **Connection cable**

Connection is carried out with screened cable according to Fieldbus specification.

For power supply, a separate two-wire cable is required.

In the product configurator of VEGAPULS, different cable glands can be selected. They cover all cable diameters in the range of 4  $\dots$  12 mm (0.16  $\dots$  0.47 in).

Make sure that the entire installation is carried out according to the Fieldbus specification. In particular, make sure that the bus is terminated with suitable terminating resistors.

# Cable screening and grounding

In systems with potential equalisation, connect the cable screen directly to ground potential at the power supply unit, in the connection box and at the sensor. The screen in the sensor must be connected directly to the internal ground terminal. The ground terminal outside on the housing must be connected to the potential equalisation (low impedance).

In systems without potential equalisation, connect the cable screen directly to ground potential on the power supply unit and the sensor. In the connection box or T-distributor, the screen of the short stub to the sensor may not be connected to ground potential or to another cable screen.

#### **Terminal compartment**

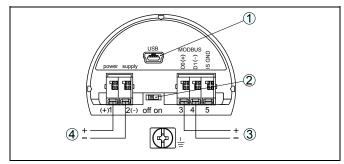


Fig. 16: Terminal compartment

1 USB interface

- 2 Slide switch for integrated termination resistor (120  $\Omega$ )
- 3 Voltage supply 4 Modbus signal
- 4 Modbus signal



# 12 **Operation**

# 12.1 Overview

The sensors can be adjusted with the following adjustment media:

- With the display and adjustment module
- With external display and adjustment unit
- an adjustment software according to FDT/DTM standard, e.g. PACTware and PC

as well as via systems from other manufacturers, depending on the signal output:

- A HART handheld (4 ... 20 mA/HART)
- The adjustment program AMS (4 ... 20 mA/HART and Foundation Fieldbus)
- The adjustment program PDM (Profibus PA)
- With a configuration tool (Foundation Fieldbus)

The entered parameters are generally saved in the sensor, optionally also in the display and adjustment module or in the adjustment program.

# 12.2 Display and adjustment module PLICSCOM

The pluggable display and adjustment module is used for measured value indication, operation and diagnosis. It is equipped with an illuminated full dot matrix as well as four keys for adjustment.



Fig. 17: Display and adjustment module PLICSCOM

The display and adjustment module is integrated in the respective sensor housing or in the external display and adjustment unit. After mounting, the sensor as well as the display and adjustment module are splash-proof even without housing cover.

# 12.3 External display and adjustment unit VE-GADIS 82

VEGADIS 62 is suitable for measured value indication and adjustment of sensors with HART protocol. The instrument is looped into the 4  $\dots$  20 mA/ HART signal cable.



Fig. 18: External display and adjustment unit VEGADIS 82

# 12.4 PACTware/DTM

As an alternative to the display and adjustment module, the sensor can also be configured via a Windows PC. To do this, the configuration software PACTware and a suitable instrument driver (DTM) according to the FDT standard are required. The current PACTware version as well as all available DTMs are compiled in a DTM Collection. The DTMs can also be integrated into other frame applications according to the FDT standard.

All device DTMs are available as a free-of-charge standard version and as a full version that must be purchased. In the standard version, all functions for complete setup are already included. An assistant for simple project configuration simplifies the adjustment considerably. Saving/printing the project as well as import/export functions are also part of the standard version.

In the full version there is also an extended print function for complete project documentation as well as a save function for measured value and echo curves. In addition, there is a tank calculation program as well as a multiviewer for display and analysis of the saved measured value and echo curves.

#### Connection of the PC via VEGACONNECT

The interface converter VEGACONNECT is required for connection of the PC. On the computer side, the connection is made via USB interface. Instead of the display and adjustment module, VEGACONNECT is placed on the sensor, the connection to the sensor is established automatically. With 4 ... 20 mA/HART sensors, the connection via HART signal can be made at any location along the signal cable.

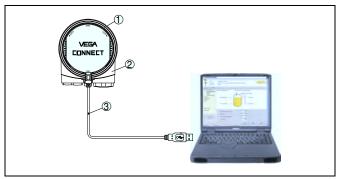


Fig. 19: Connection via VEGACONNECT and USB

- 1 VEGACONNECT
- 2 plics<sup>®</sup> sensor
- 3 USB cable to the PC

Necessary components:

- VEGAPULS
- PC with PACTware and suitable DTM
- VEGACONNECT
- Voltage supply/Processing system



# 12.5 Alternative adjustment programs

#### PDM

For HART and Profibus PA sensors, device descriptions are available as EDDs for the adjustment program PDM. The device descriptions are already included in the current version of the PDM. Newer instrument drivers that are not yet delivered with the PDM are available in the download section.

#### AMS

For HART and Foundation Fieldbus sensors, device descriptions are available as EDDs for the adjustment program AMS. The device descriptions are already included in the current version of the AMS. Newer instrument drivers that are not yet delivered with the AMS are available in the download section.



#### **Dimensions** 13

~ 69 mm (2.72")

M20x1,5/ ½ NPT

<u>ø 79 mm</u> (3.11")

1


- 116 mm (4.57")

ø 86 mm

(3.39"


1

# **Plastic housing**

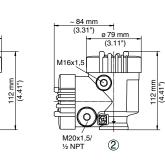

- Single chamber housing 1
- 2 Double chamber housing

# **Aluminium housing**

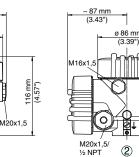

ø 86 mm (3.39") 120 mm (4.72")

- 87 mm (3.43")

/ M20x1,5/ ½ NPT

(4.61")

17 mm

ø 86 mm (3.39")

3


1 Single chamber housing

E

/ M20x1 ½ NPT

2 Double chamber housing


# Stainless steel housing

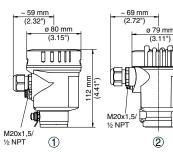

Single chamber housing, electropolished Single chamber housing, precision casting Double chamber housing, precision casting 1

- 2 2

**VEGAPULS 67** 

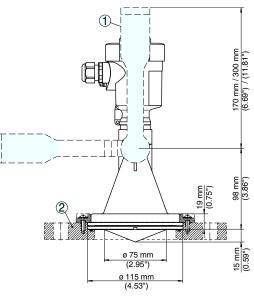

# **VEGAPULS SR 68**

<u>G1½ A</u>

216 mm (8.5")


120 mm

Mounting strap

Adapter flange

1

2

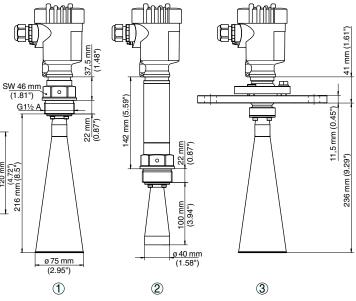

Threaded version 1


L

Threaded version with temperature adapter

2 3 Flange version with swivelling holder



# **VEGAPULS 68**

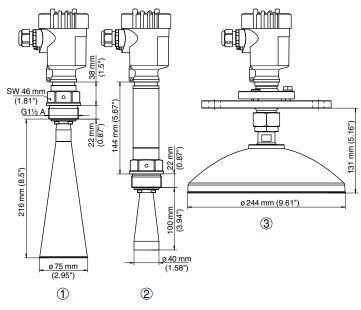


1 Threaded version with horn antenna

2 3 Threaded version with horn antenna and temperature adapter

Version with parabolic antenna

#### **VEGAPULS 69**

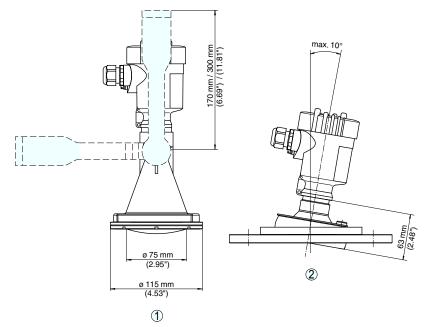

Mounting strap 1

2 Adapter flange

The listed drawings represent only an excerpt of the available process fittings. You can find more drawings at www.vega.com/downloads under "Drawings".

A.P.O. - ELMOS v.o.s., Pražská 90, 509 01 Nová Paka, Tel.: +420 493 504 261, Fax: +420 493 504 257, E-mail: apo@apoelmos.cz, Internet: www.apoelmos.cz